

TREK

HOSC PAYLOAD ETHERNET GATEWAY (HPEG)

USER GUIDE



February 2015

Approved for Public Release; Distribution is Unlimited.

TABLE OF CONTENTS

<u>PARAGRAPH</u>	<u>PAGE</u>
1 Welcome.....	1
1.1 Getting Started	1
1.2 System Requirements.....	1
2 Technical Support.....	1
3 Introduction.....	2
4 Overview of the User Interface.....	3
4.1 Main Window	3
4.2 Toolbars	5
4.2.1 Configuration Toolbar.....	5
4.2.2 HPEG Toolbar.....	5
4.2.3 Ground Node ID Toolbar	6
4.3 Menus.....	6
5 Quick Start Guides	7
5.1 How to Configure the Application	7
5.2 How to Start and Stop the HPEG Service	7
5.3 How to Start a Session with a Destination	8
5.4 How to Stop a Session with a Destination.....	9
5.5 How to View the Services Associated with a Destination	9
5.6 How to Enable and Disable the HPEG Idle Check	9
5.7 How to Change Your POIC Login Password.....	9
5.8 How to Re-Authenticate your POIC Login.....	10
5.9 How to Request a POIC Login Re-Authentication Status.....	10
5.10 How to Request POIC Common Information	10
6 Details.....	10
6.1 Configuration	10
6.1.1 General Tab.....	10
6.1.2 Firewall (NAT) Tab	11
6.2 HPEG Configuration and Status	12
6.3 HPEG Messages.....	13
6.4 Application Messages	13
6.5 Advanced Settings.....	15
6.6 Application Settings	15
7 FAQ and Troubleshooting	16

FIGURES

<u>FIGURE</u>	<u>PAGE</u>
Figure 1 TReK/POIC Communication	3
Figure 2 Standard IP Communication	3
Figure 3 Main Window	3
Figure 4 Configuration Toolbar	5
Figure 5 HPEG Toolbar	6
Figure 6 HPEG Toolbar Populated	6
Figure 7 Ground Node ID Toolbar	6
Figure 8 Ground Node ID Toolbar with DTN Configuration Information	6
Figure 9 Inactive Destination Selection	8
Figure 10 Active Destination	8
Figure 11 Destination Services List	9
Figure 12 Configure Dialog (General Tab)	11
Figure 13 Configuration Dialog (Firewall Tab)	12
Figure 14 HPEG Messages	13
Figure 15 Messages Dialog	14
Figure 16 Configure Messages Dialog	14
Figure 17 Clear Messages Dialog	14
Figure 18 Advanced Settings Dialog	15

1 Welcome

The Telescience Resource Kit (TReK) is a suite of software applications and libraries that can be used to monitor and control assets in space or on the ground.

The TReK HPEG application provides the capability to access the Huntsville Operations Support Center (HOSC) Payload Ethernet Gateway (HPEG) service.

1.1 Getting Started

Start with the Introduction which provides an application overview. Next, try the Quick Start Guides for “How Tos” for common functions. For help with details, reference the Details section. See the FAQ and Troubleshooting section for helpful hints and solutions to the common “gotchas”.

1.2 System Requirements

Windows 7, Red Hat Enterprise Linux 6.x.

2 Technical Support

If you are having trouble installing the TReK software or using any of the TReK software applications, please try the following suggestions:

Read the corresponding material in the manual and/or on-line help.

Ensure that you are correctly following all instructions.

Checkout the TReK Web site at <http://trek.msfc.nasa.gov/> for Frequently Asked Questions.

If you are still unable to resolve your difficulty, please contact us for technical assistance:

TReK Help Desk E-Mail, Phone & Fax:

E-Mail:	trek.help@nasa.gov
Telephone:	256-544-3521 (7:00 a.m. - 3:30 p.m. Central Time)
Fax:	256-544-9353

TReK Help Desk hours are 7:00 a.m. – 3:30 p.m. Central Time Monday through Friday. If you call the TReK Help Desk and you get a recording please leave a message and someone will return your call. E-mail is the preferred contact method for help. The e-mail message is automatically forwarded to the TReK developers and helps cut the response time.

3 Introduction

The TReK HPEG application provides the capability to access the Huntsville Operations Support Center (HOSC) Payload Ethernet Gateway (HPEG) service. The HPEG service provides access to payloads onboard the International Space Station (ISS) using standard network protocols and services. Services supported include:

- Ping over ICMP
- Hypertext Transfer Protocol Secure (https) over TCP on port 443
- Remote Desktop (rdp) over TCP on port 3389
- Secure Shell (ssh) over TCP on port 22
- CCSDS File Delivery Protocol (cfdp) over UDP on port 4560
- Delay Tolerant Network (dtn) over TCP on a configured port

Note: In the event this list does not match the Payload to Generic User Interface Definition Document (PGUIDD) SSP 50305, the information in the PGUIDD takes precedent.

Access to these services is based on HOSC account privileges.

The general sequence of events when using HPEG is as follows:

- Establish VPN session with HOSC.
- Start the TReK HPEG application.
- Push the Configure button to configure the application.
- Push the Activate button to activate the HPEG service.
- During activation you will be prompted to log into your HOSC account.
- Once the HPEG service is active, start a session with your destination (payload).
- Use the Proxy IP address returned to communicate with your payload using other products such as the TReK CFDP application, Remote Desktop, a console command line to ssh, etc.
- When finished Deactivate and Exit.

Interfaces between TReK and the HOSC are shown in Figure 1. An initial interface is established to login and a second interface is established for HPEG communication (starting and stopping sessions, etc.).

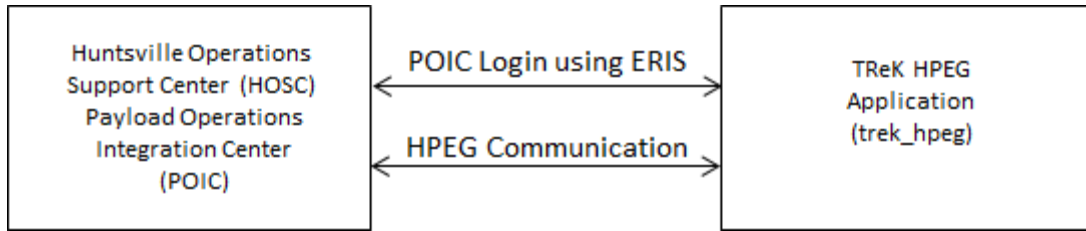


Figure 1 TReK/POIC Communication

Figure 2 shows the standard IP communication that is possible between ground applications and flight applications once HPEG services have been started.

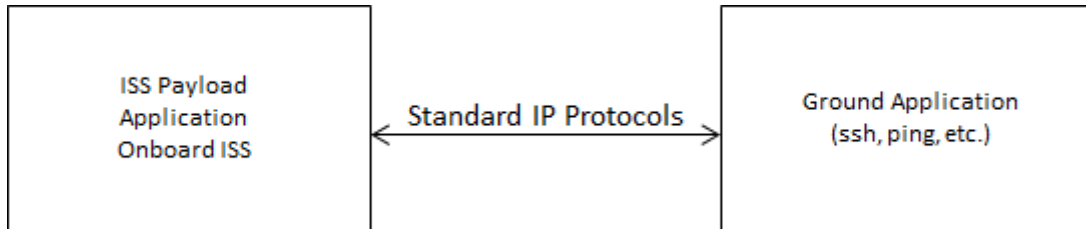


Figure 2 Standard IP Communication

4 Overview of the User Interface

4.1 Main Window

The main window is shown in Figure 3. The Message area is a dock window that you can float or dock. To float a dock window, use your left mouse button to click and hold the title area while dragging the window to another area of the screen. To dock, use the title bar to drag the dock window over the main window and drop.

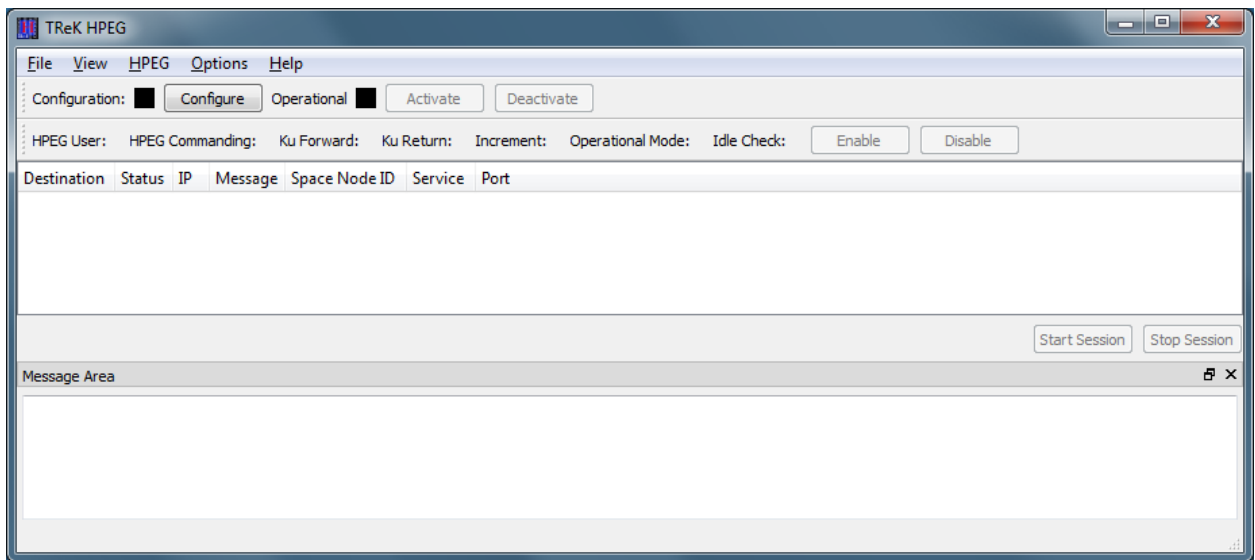


Figure 3 Main Window

Configuration Toolbar

The Configuration toolbar at the top of the window provides quick access to configure the application, activate, and deactivate the HPEG service.

HPEG Toolbar

The HPEG toolbar (located under the Configuration toolbar) provides quick access to HPEG Status and Configuration information. It also provides the capability to Enable and Disable the HPEG Idle Check capability.

Ground Node ID Toolbar

The Ground Node ID Toolbar (located under the HPEG toolbar when displayed) provides quick access to the Ground Node ID. If you do not have a Ground Node ID assigned, this toolbar will not be displayed. The Ground Node ID toolbar is only displayed when the HPEG service is active and a Ground Node ID is in use. This toolbar will also display Delay Tolerant Network information if you have access to this service.

HPEG

The HPEG area provides a list of “Destinations” onboard ISS you are authorized to access through the HPEG. Typically you will have one destination in the list – your payload. The HPEG area also provides “Start Session” and “Stop Session” buttons to start and stop an HPEG session for a selected destination. Once you activate the HPEG service, and you have a destination in your list, you will be able to see the specific services authorized for use with that destination (e.g. ping, ssh, cfdp). If you are authorized to use the CFDP service or the DTN service, you will be assigned a Ground Node ID, and your payload onboard will be assigned a Space Node ID. These IDs correspond to CFDP Entity IDs (EIDs) needed by the CFDP protocol and the DTN node number when using DTN. If you are authorized to use the CFDP service or DTN service, you will be prompted to select your Ground Node ID during HPEG activation. It is possible to have more than one Ground Node ID assigned. In this case you will be prompted with a list and can select the Ground Node ID you would like to use for the session. If you are not authorized to use the CFDP service or the DTN service, you will not be prompted for a Ground Node ID and the Space Node ID field will always be empty.

If you are authorized to use the CFDP service or DTN service, you must select a Ground Node ID when prompted. If you select a Ground Node ID that is in use, you will be prompted again. If all Ground Node IDs are in use, you will need to free one of the Ground Node IDs so you can select one that is available or cancel the activation.

Message Area

The Message Area displays important information, warning and error messages. The message area can be cleared using the View menu.

4.2 Toolbars

There are three toolbars: Configuration, HPEG and Ground Node ID. The Configuration toolbar provides visual information about the state of the application and provides access to common application functions. The HPEG toolbar provides HPEG Configuration and Status information. The Ground Node ID toolbar provides access to the Ground Node ID selected during activation and DTN configuration information if you are authorized to use the DTN service.

4.2.1 Configuration Toolbar

The Configuration toolbar is shown in Figure 4. It can be used to configure the application, activate the HPEG service, and deactivate the HPEG service.

 


Figure 4 Configuration Toolbar

Configuration Status

When the Configuration status is black, this indicates the application has not been configured. When the Configuration status is green, this indicates the application has been configured and the HPEG service can be activated.

Use the Configure button to access the Configuration dialog to configure the application.

Operational Status

When the Operational status is black, this indicates the HPEG service is inactive. When the Operational status is purple, activation is in progress. When the Operational status is green, this indicates the HPEG service is active. The application must be properly configured before the Activate button will be available. The HPEG service must be active before the Deactivate button will be available.

Use the Activate button to activate the HPEG service. This will initiate all internal activities needed to prepare the application to support the HPEG service. If you need to reconfigure the HPEG application, deactivate the HPEG service, and then push the Configure button to reconfigure.

4.2.2 HPEG Toolbar

The HPEG toolbar is shown in Figure 5 and Figure 6. When the HPEG service is Inactive, the HPEG Toolbar will not contain any HPEG Status and Configuration information. When the HPEG service is activated, the HPEG Toolbar will display HPEG Status and Configuration information. For details about HPEG Status and Configuration information please reference Section 6.2. The HPEG Toolbar also provides the capability to Enable and Disable the HPEG Idle Check. This feature is only available when the HPEG service is active.

 


Figure 5 HPEG Toolbar

 


Figure 6 HPEG Toolbar Populated

4.2.3 Ground Node ID Toolbar

The Ground Node ID Toolbar is shown in Figure 7. This toolbar provides quick access to the Ground Node ID. If you do not have a Ground Node ID assigned, this toolbar will not be displayed. The Ground Node ID toolbar is only displayed when the HPEG service is active and a Ground Node ID is in use. If you are authorized to use the DTN service, the Ground Node ID Toolbar will also display DTN configuration information as shown in Figure 8.

 


Figure 7 Ground Node ID Toolbar

 


Figure 8 Ground Node ID Toolbar with DTN Configuration Information

4.3 Menus

The HPEG application menus are: File, View, HPEG, Options, and Help. Each of these menus is described in more detail below.

File Menu

The File menu provides the capability to exit the application.

View Menu

The View menu provides the capability to clear the main window message area and show and hide the main window message area.

HPEG Menu

The HPEG menu provides the capability to configure the application, activate and deactivate the HPEG service, and show HPEG messages.

Options Menu

The Options menu provides the capability to change your POIC password, re-authenticate your POIC login, request a POIC login re-authentication status, and request POIC

common information. It also provides access to the Messages dialog which can be used to display and filter application messages. Access to advanced settings is also available.

Help Menu

The Help menu provides access to on-line help and application version information.

5 Quick Start Guides

This section provides “How Tos” for common functions.

5.1 How to Configure the Application

The following steps describe the minimum necessary to configure the application. For additional information and details about the Configure dialog please reference section 6.1.

1. Push the Configure button to display the Configure dialog.
2. Enter a valid local IP address.
3. Enter the POIC Host Name or POIC IP Address.
4. Enter the POIC port.
5. Enter a port number that may be used for communication between TReK and the HOSC about HPEG.
6. Push the OK button to save the configuration information and exit the dialog.

Note: If your site requires Firewall Network Address Translation, use the Firewall (NAT) tab to enter this information.

If the application is configured correctly, the Configuration status will be green.

5.2 How to Start and Stop the HPEG Service

This section describes how to start (activate) and stop (deactivate) the HPEG service.

1. Before the HPEG service can be started, you must configure the application. To learn more about this see section 5.1. The Configure status must be green before you can start the HPEG service.
2. To start the HPEG service, push the Activate button on the Configuration toolbar. The activation process will initiate a POIC login and request the HPEG service. If this is successful the Operational status will turn green, the HPEG toolbar will be populated with HPEG Configuration and Status information, and you will see a list of authorized destinations in the HPEG area.
3. To stop the HPEG service, push the Deactivate button.
4. When activating or deactivating important status and/or error messages will be displayed in the Main Window message area.

5.3 How to Start a Session with a Destination

This section describes how to start a session with a destination.

1. The HPEG application must be configured and the HPEG service must be active.
2. Select an Inactive Destination in the HPEG area and push the Start Session button. This will send a request to the POIC to start a session for the destination. If this is successful, the destination's Status column will show Active and the Proxy IP Address will be displayed in the IP column. If you have a Space Node ID, it will be shown in the Space Node ID column. You will also see a message in the Message column indicating the status of your "Start Session" request.

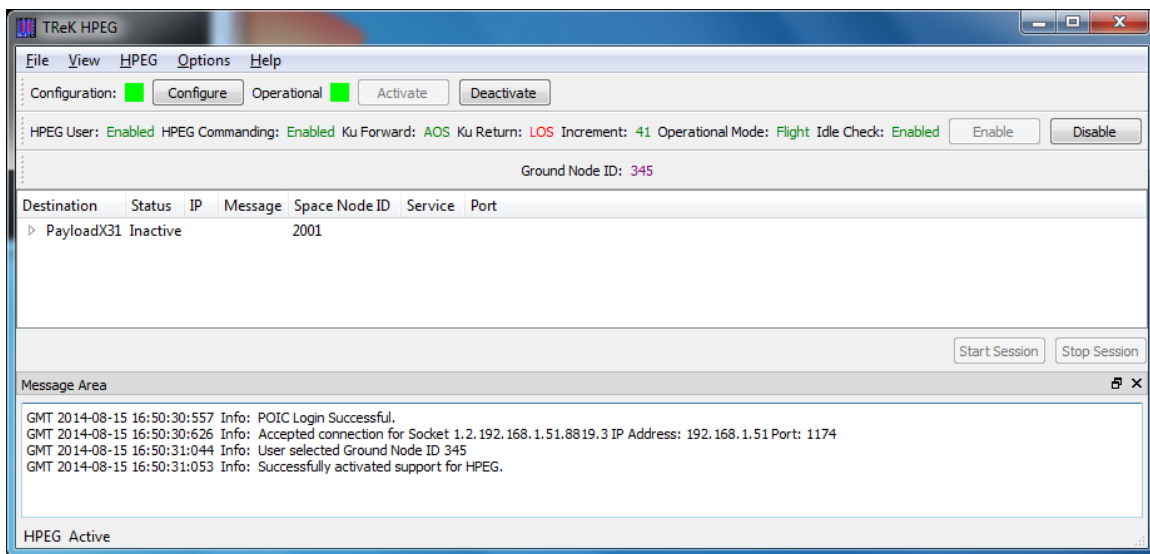


Figure 9 Inactive Destination Selection

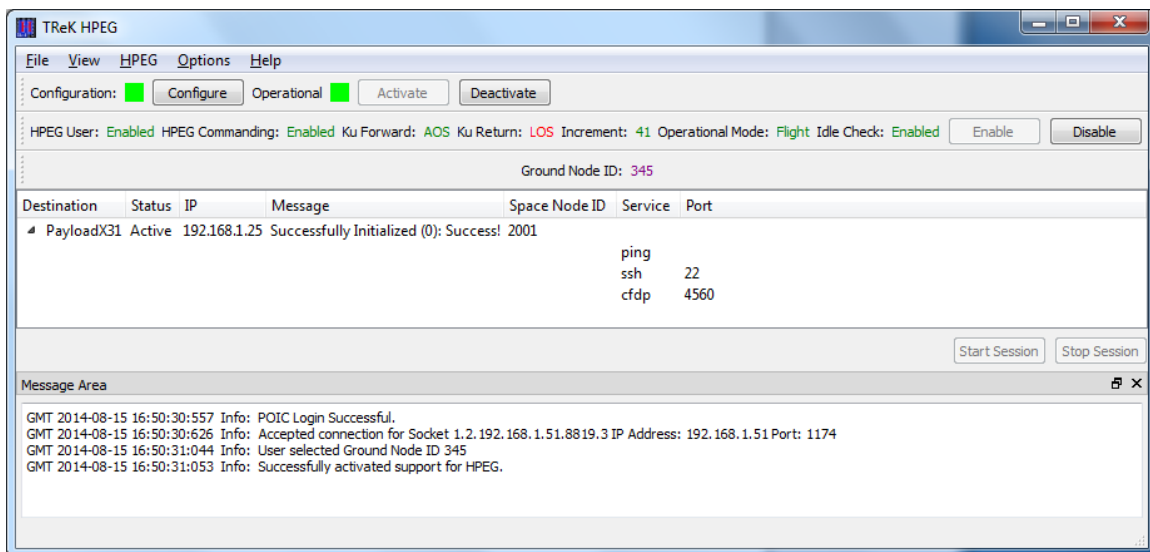


Figure 10 Active Destination

5.4 How to Stop a Session with a Destination

This section describes how to stop a session with a destination.

1. The HPEG application must be configured and the HPEG service must be active.
2. Select an “Active” Destination in the HPEG area and push the Stop Session button.
This will send a request to the POIC to stop the session for that destination. If this is successful, the destination’s Status column will show Inactive and the IP column will be blank. You will also see a message in the Message column indicating the status of your “Stop Session” request.

5.5 How to View the Services Associated with a Destination

Click on the arrow located next to a destination to view the list of approved services associated with a specific destination.

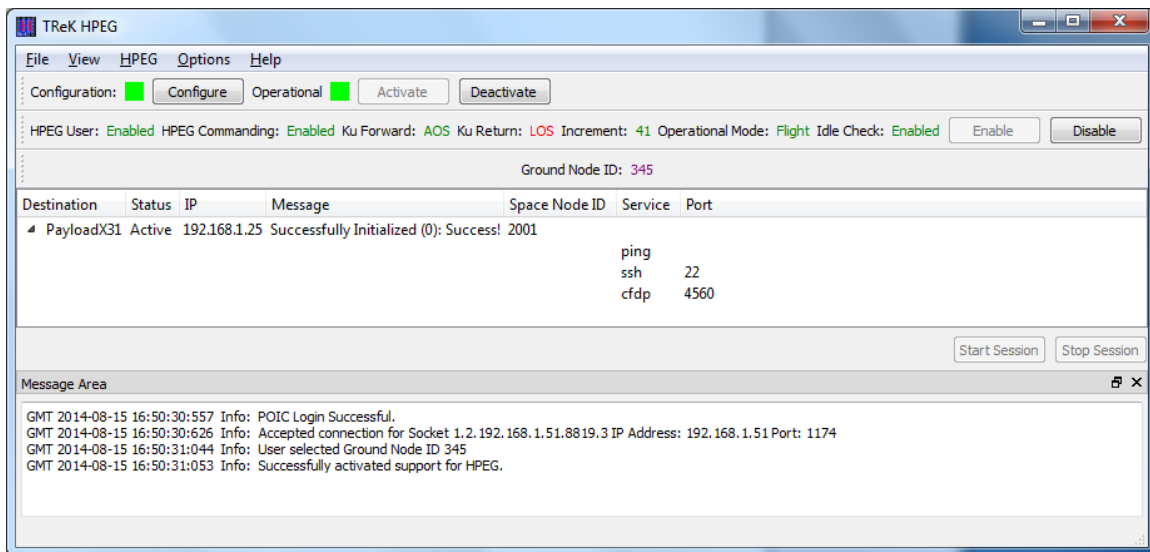


Figure 11 Destination Services List

5.6 How to Enable and Disable the HPEG Idle Check

The Enable and Disable buttons on the HPEG toolbar can be used to control the HPEG Idle Check. If you disable the HPEG Idle check, you will not be prompted when your HPEG session has been idle for a HOSC configured amount of time.

5.7 How to Change Your POIC Login Password

The Options menu provides the capability to initiate a POIC password change.

5.8 How to Re-Authenticate your POIC Login

The Options menu provides the capability to initiate a POIC login re-authentication.

5.9 How to Request a POIC Login Re-Authentication Status

The Options menu provides the capability to request a POIC login re-authentication status.

5.10 How to Request POIC Common Information

The Options menu provides the capability to request POIC Common Information. This includes various types of information such as project, mission, and database information.

6 Details

This section covers various application details.

6.1 Configuration

The Configure dialog contains two tabs: General and Firewall (NAT). The General tab is used to provide information needed for TReK to communicate with the POIC about HPEG. The Firewall (NAT) tab can be used to enter configuration information for locations using a firewall with network address translation.

6.1.1 General Tab

The General tab is shown in Figure 12. Each field is described below.

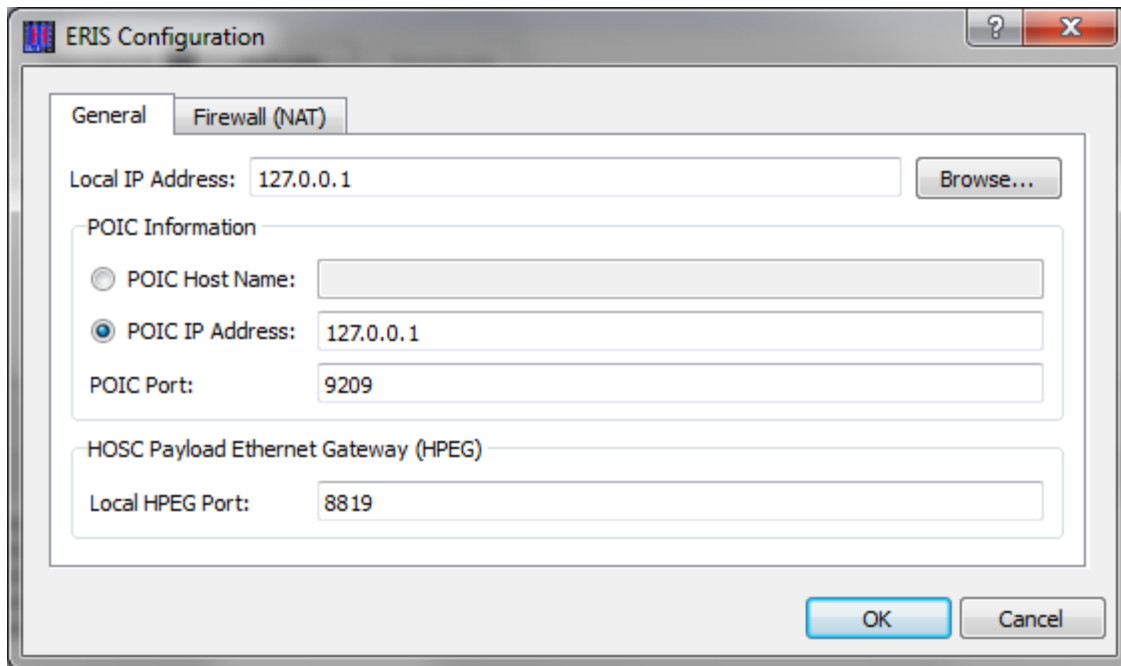


Figure 12 Configure Dialog (General Tab)

Local IP Address

This field should contain your local IP address.

POIC Information

POIC information fields include the POIC Host Name, POIC IP Address, and POIC Port.

HOSC Payload Ethernet Gateway (HPEG)

A TCP socket is created to send and receive HPEG information between TReK and the POIC. The Local IP Address and HPEG port are used to create this TCP socket.

6.1.2 Firewall (NAT) Tab

The Firewall tab is shown in Figure 13. Each field is described below.

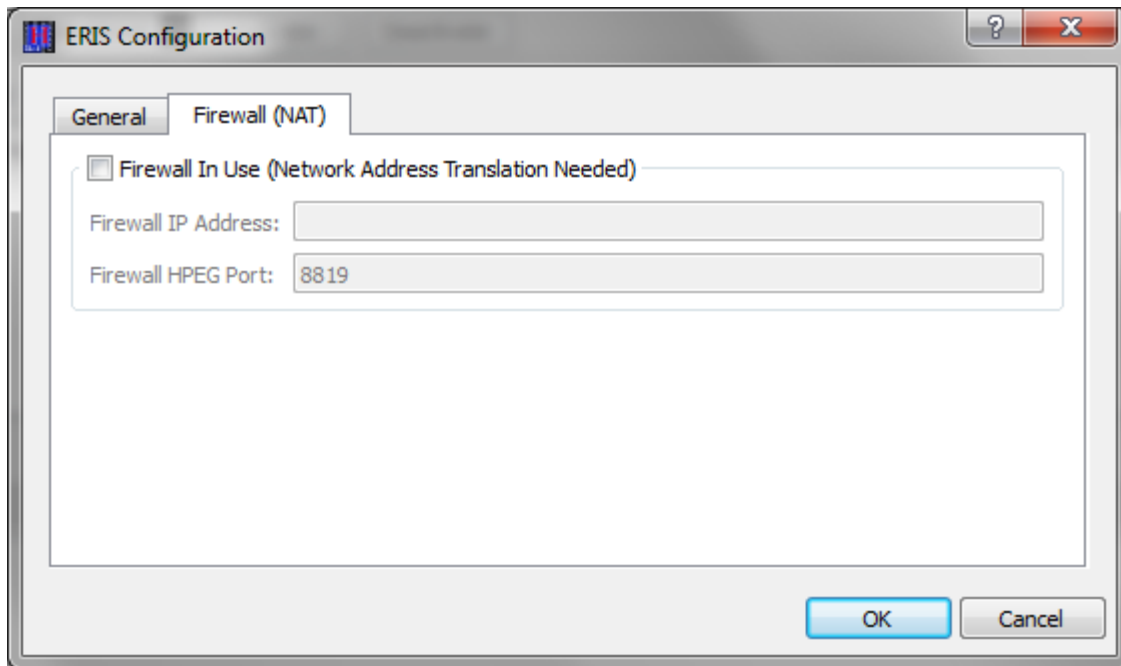


Figure 13 Configuration Dialog (Firewall Tab)

Firewall In Use (Network Address Translation Needed)

Check the “Firewall In Use” checkbox, if your location is using a Firewall with network address translation.

Firewall IP Address

The Firewall IP Address.

Firewall HPEG Port

The Port on the Firewall that should be used for HPEG traffic.

6.2 HPEG Configuration and Status

This section describes the items in the main window HPEG toolbar.

HPEG User

This indicates if your user account is Enabled or Disabled for HPEG.

HPEG Commanding

This indicates if the POIC’s HPEG system is enabled or disabled.

Ku Forward

This indicates if the Ku Forward link is available.

Ku Return

This indicates if the Ku Return link is available.

Increment

This displays the increment you are logged into.

Operational Mode

This displays the operational mode you are logged into.

Idle Check

This indicates if the HPEG Idle Check is Enabled or Disabled. If you push the Enable button the Idle Check will be enabled. If you push the Disable button, the Idle Check will be disabled. If the Idle Check is disabled, the POIC will not monitor the HPEG sessions to determine if any have gone idle.

6.3 HPEG Messages

The HPEG Messages dialog is shown in Figure 14. It is available from the HPEG menu. This dialog displays HPEG messages associated with HPEG Destinations.

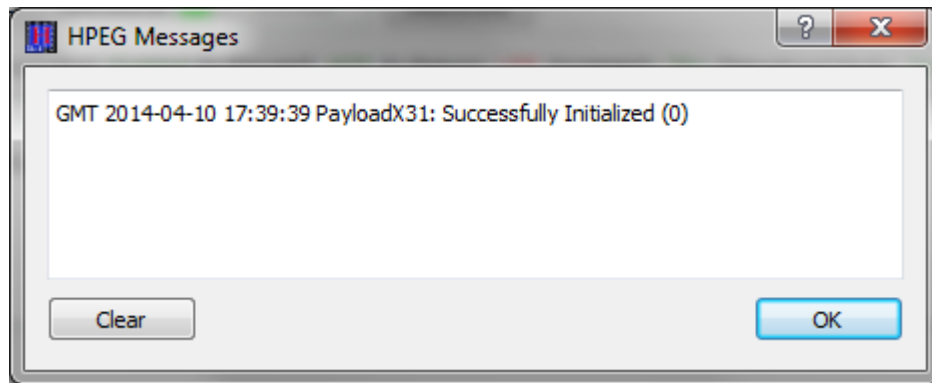


Figure 14 HPEG Messages

6.4 Application Messages

Various types of application messages are generated including information, progress, warning, error, and debug messages. Information, warning, and error messages will be displayed in the main window message area. All application messages are sent to the Messages dialog shown in Figure 15. The Messages dialog can be configured to display specific types of messages. By default, the Messages dialog will display information, progress, warning, and error messages. Columns in the Messages dialog can be sorted by clicking on the column header. The Messages dialog is available from the Options menu.

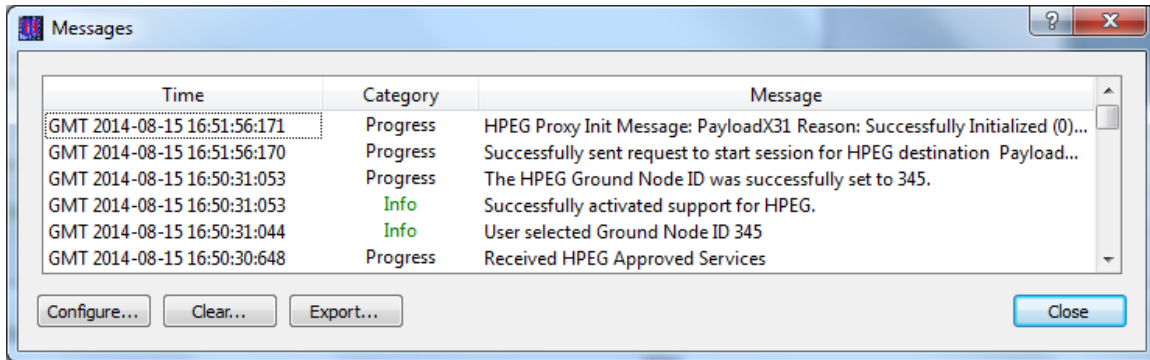


Figure 15 Messages Dialog

Configure

The Configure button provides access to the Configure Messages dialog shown in Figure 16. This dialog is used to filter the types of messages (category) displayed in the Messages dialog.

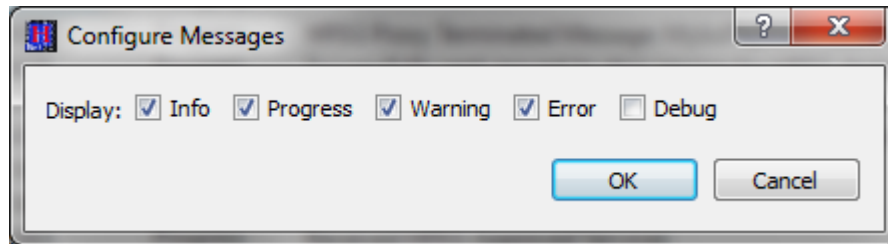


Figure 16 Configure Messages Dialog

Clear

The Clear button provides access to the Clear Messages dialog shown in Figure 17. This dialog provides two ways to clear messages in the Messages dialog. You can clear all the messages or clear selected messages. Once you clear messages, the messages are permanently deleted.

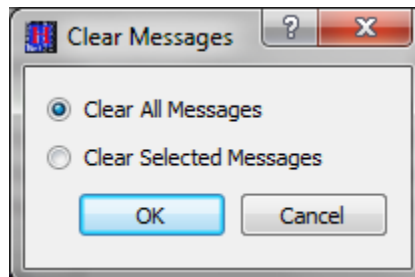


Figure 17 Clear Messages Dialog

Export

The Export button provides the capability to save all the application messages to a file. When you push the Export button you will be prompted for a directory and filename.

Export will save all messages, not just the messages currently displayed in the Messages dialog (i.e. the 'Configure' filter is not applied). The name you provide for the file will be modified with a time tag prefixed to the filename. The time tag indicates the time the file was closed. For example:

Filename Input: messages.txt
 Filename Output: GMT_2014-04-10_16~57~27~182_messages.txt.

6.5 Advanced Settings

The Advanced Settings dialog provides access to timeout values used in communication with the Huntsville Operations Support Center. It is unlikely there would ever be a need to modify these settings. The settings can only be modified when the HPEG service is inactive. The Advanced Settings dialog is shown in Figure 18.

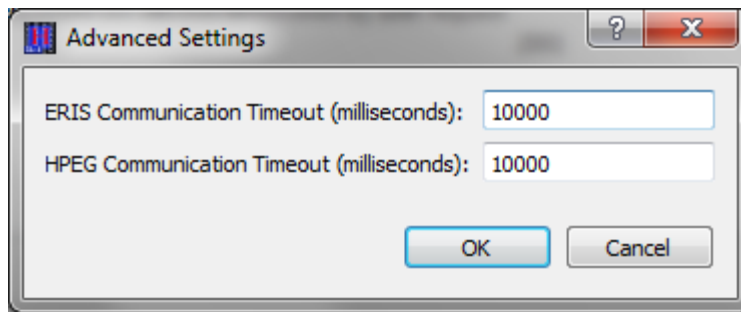


Figure 18 Advanced Settings Dialog

6.6 Application Settings

The HPEG application saves application settings each time you exit the application. The next time you run the application, the application will initialize with the previous settings. The following settings are saved:

- Application Window Size
- Application Window Position
- POIC Host Name or POIC IP Address Selection
- POIC Host Name Entry
- POIC IP Address Entry
- HPEG Port Entry
- Firewall In Use Selection
- Firewall IP Address Entry
- Firewall Port Entry
- Firewall HPEG Port Entry
- Configure Messages Checkbox Selections
- Advanced Settings

7 FAQ and Troubleshooting

This section addresses Frequently Asked Questions and provides tips for troubleshooting common gotchas.

No FAQs Yet.